


VW Crafter 17- H2

Mounting instructions

Art. 84083770, 84083771

Lamp holder for working lights

English

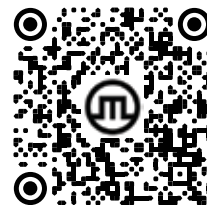

WWW.METEC.EE

Scan the QR code
for translated
instructions or visit
metec.ee/instructions



Weight: 9,5 kg

Time of mounting w/o wiring: 60 min

Required tools:




A2 / A4

M8 - 17 Nm

VW Crafter 17- H2

Art. 84083770, 84083771

Lamp holder for working lights

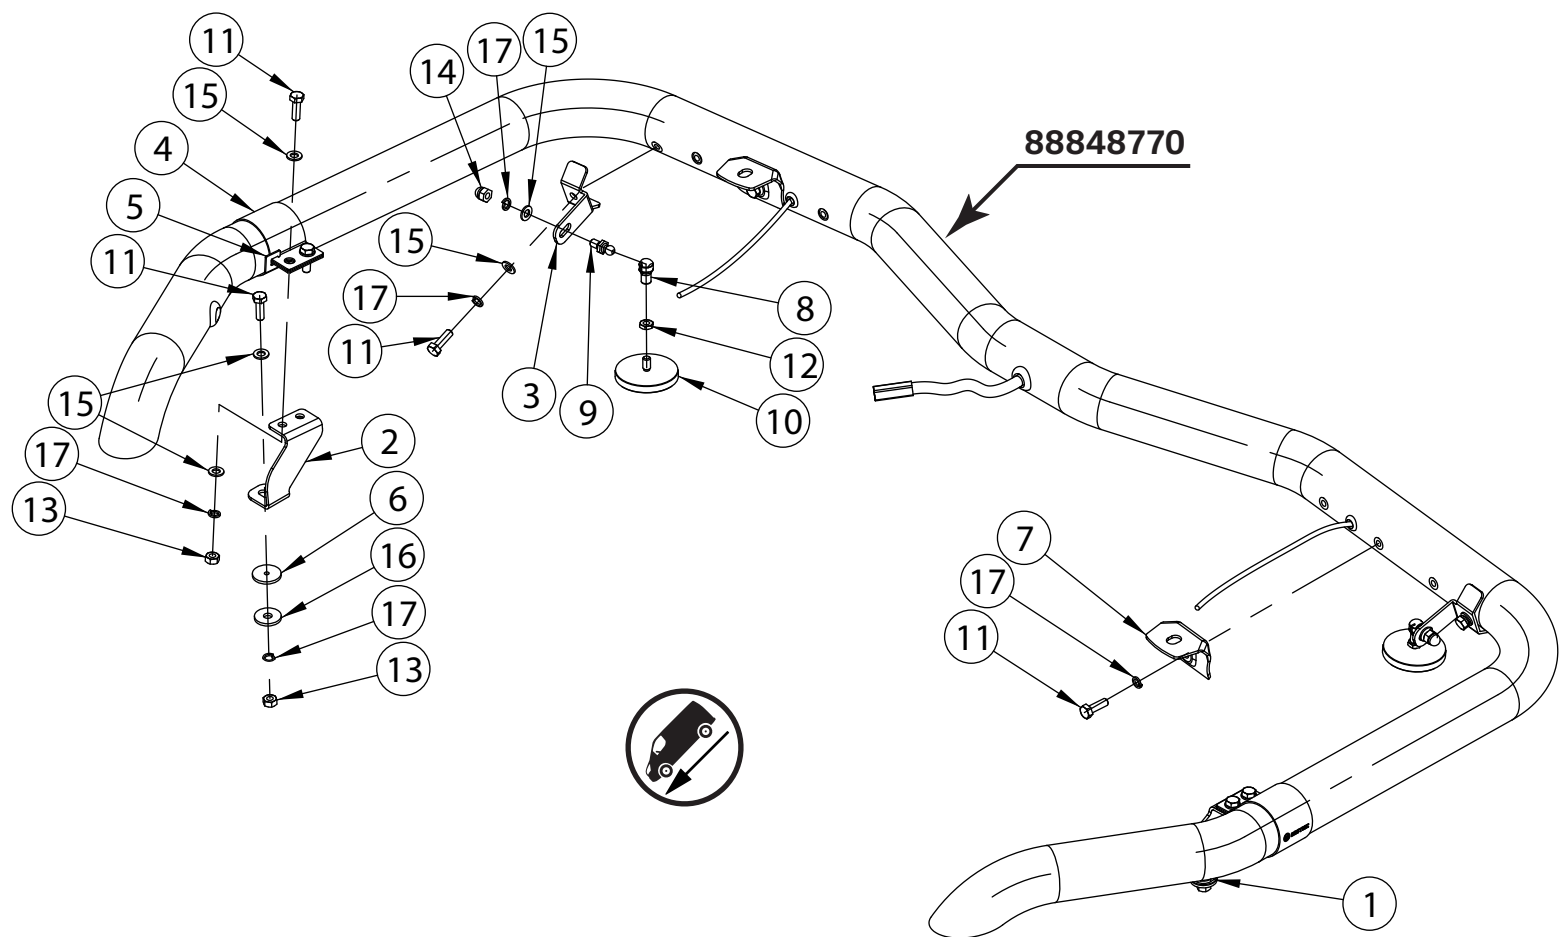

Pos	Description	QTY	Pos	Description	QTY
1.	Bracket	1	11.	Bolt M8x25 DIN933-A2	10
2.	Bracket	1	12.	Nut M8 DIN439-A2	2
3.	Bracket	2	13.	Nut M8 DIN934-A2	6
4.	Clamp	2	14.	Nut M8 DIN1587-A2	2
5.	Brace-it installation tool	2	15.	Flat Washer 8,4x16x1,6	14
6.	Rubber washer	2	16.	Flat Washer 9x28x3	2
7.	Lamp fixing bracket	2	17.	Spring washer A8	12
8.	Ball joint	2			
9.	Ball joint	2			
10.	Magnetic fastening M8	2			

VW Crafter 17- H2

Art. 84083770, 84083771

Lamp holder for working lights







NB!



To prevent cold welding, use cold weld grease or engine oil




Installation of the lights must be carried out by a qualified electrician only

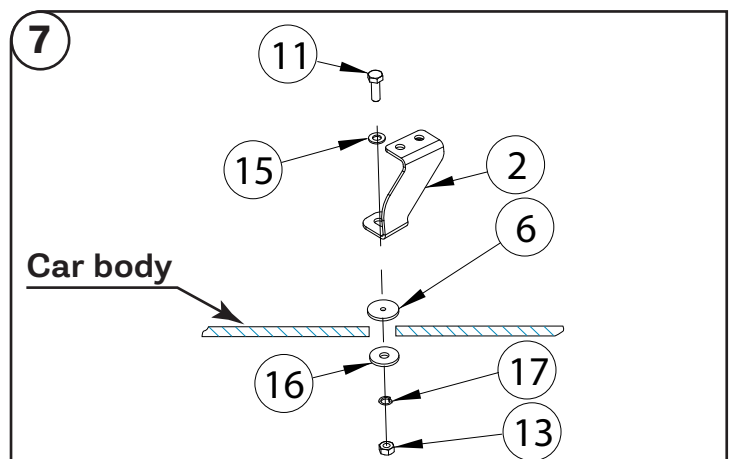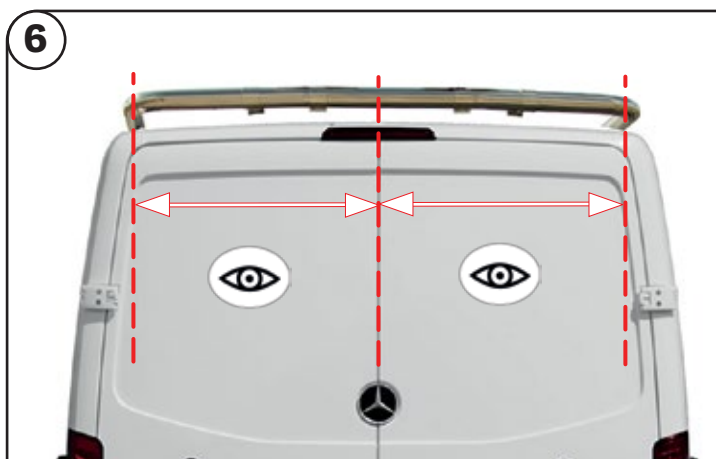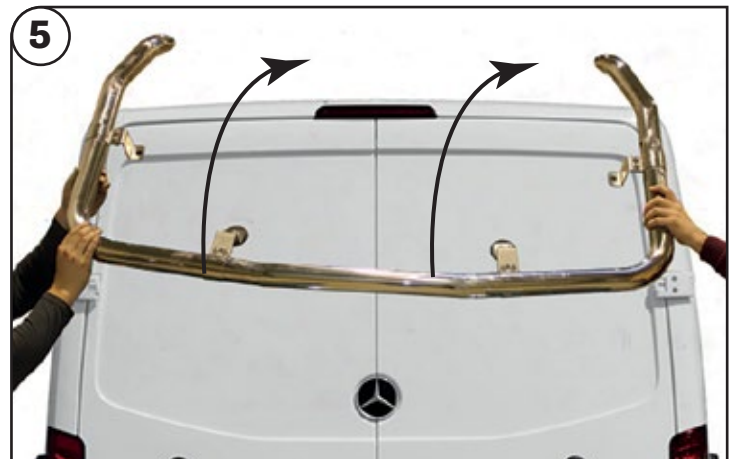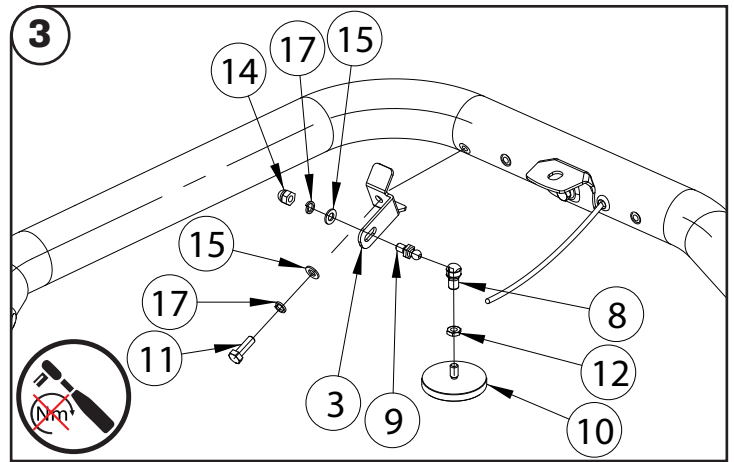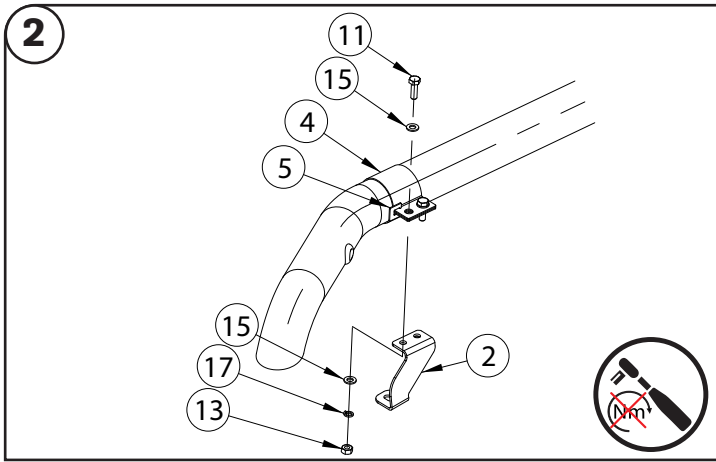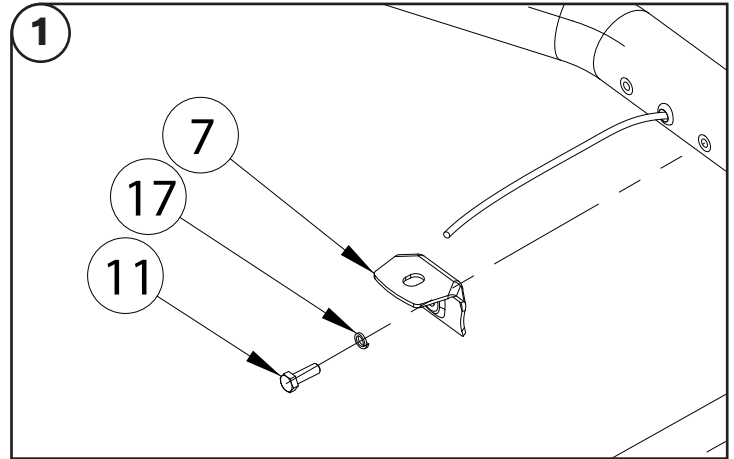

VW Crafter 17- H2

Art. 84083770, 84083771

Lamp holder for working lights

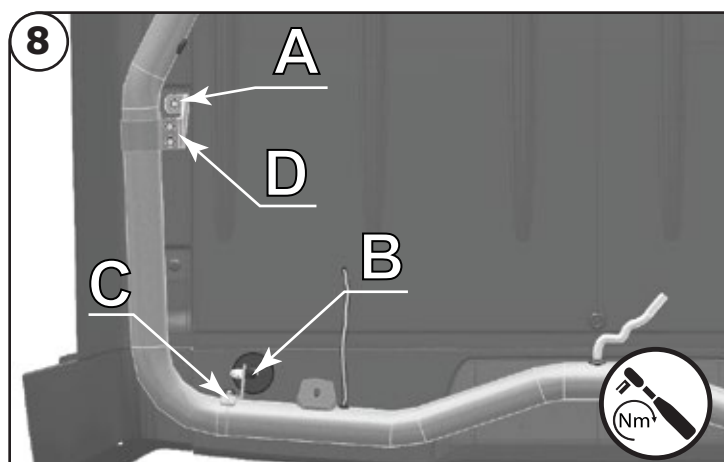

Check and retighten the fasteners after each 10 000km



Clean and wash the product twice a month to prevent corrosion

In case of any defects or damage to the METEC product upon delivery, contact the reseller or point of sale where you made your purchase for resolution